



2.00

CENTER LINE OF DOVETAIL BAR

NOMINAL SPACING BETWEEN DOVETAIL AND ANVIL ROLL

WHEN USED WITH AN ANVIL ROLL, MINIMAL AIR PRESSURE SHOULD BE USED AND HOT ELEMENT SHOULD MAKE MINIMAL CONTACT WITH ANVIL ROLL.

ANVIL ROLL

1.625 NOM.

DETAIL	SHEET	QTY	DESCRIPTION	MATL.
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES				
			TOLERANCES: 3 PLACE DECIMALS: ±.005	FRACTIONS: ±1/32
			2 PLACE DECIMALS: ±.015	ANGLES: ±0°-30'
BURRIS MACHINE COMPANY, INC.				
P.O. BOX 2858, HICKORY, NC 28601				
PHONE 828/322-6914 FAX 828/324-2793				
www.burrismachineco.com e-mail: burrito@abits.net				
JOB NUMBER:		TITLE:		
SCALE:		HOT ELEMENT MOUNTING		
DATE:		USED ON:		
DRAWN BY:				
CHECKED BY:		MATERIAL:	SHY. SIZE	DRAWING NUMBER
SHEET OF:				REVISION